




Product Name: Recessed PIR

General information

- This product must be installed in accordance with the latest edition of the IET Wiring Regulations and local Building Regulation by a qualified competent person.
- The mains power supply must be turned off before inspection, installation or removal of the product, ensuring that the supply is locked off to prevent inadvertently switching the supply on.
- It is the installer's responsibility to ensure that the installation is suitable for the total load of the product(s). The supply cable fuses/circuit breakers must be correctly rated for the electrical load and taking into account for any transient inrush currents that may occur.
- It is the installer's responsibility to ensure that the environmental operating and storage conditions are complied with and that any fire risks are considered.
- Do not perform insulation strength or insulation resistance tests on the installation with the product(s) connected, this can damage the product and give erroneous readings.
- Do not loop-in supply cables at the product supply terminals unless there is provision for 2-way connection at the terminals.
- To ensure that the product warranty remains valid, the product must be installed and maintained in accordance with these installation instructions and the product must not be modified in any way.

-  Products marked with this symbol must not be covered with thermally insulating material.
-  This symbol on covers over light sources indicates dangerous live parts do not operate the product with this cover removed.

Dimensions

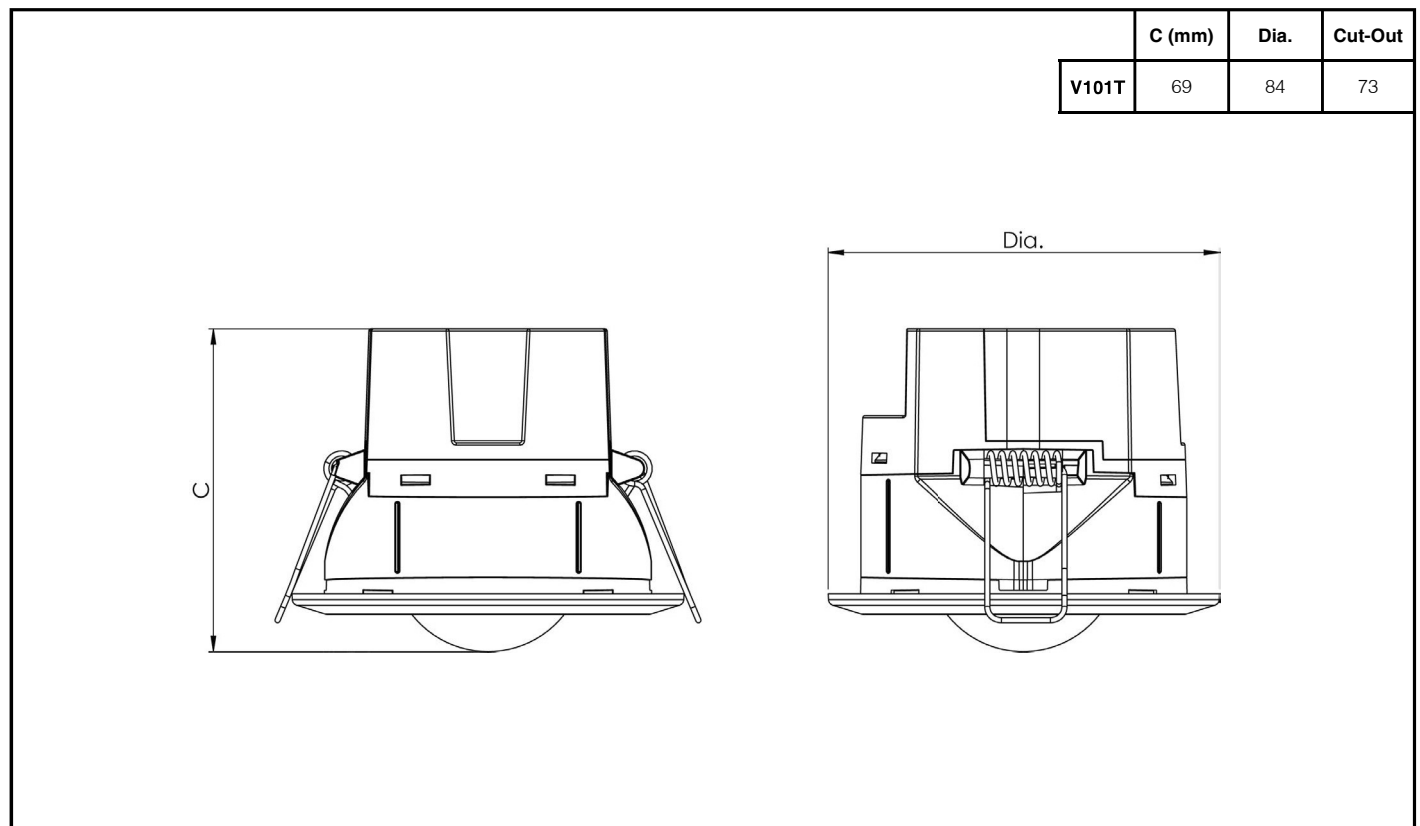

INSTALLATION & OPERATING INSTRUCTIONS



Product Name: Recessed PIR

1

Remove the product from its packaging.

2

Bring supply cable through sensor mounting position.

3

Remove terminal cover and insert supply cable under the strain relief clamp.

4

Terminate supply cable into the terminal connectors as shown above.

5

On-Time duration set-up.

SW1	SW2	SW3	Time
0	0	0	30 min
0	0	1	20 min
0	1	0	10 min
0	1	1	5 min
1	0	0	3 min
1	0	1	2 min
1	1	0	1 min
1	1	1	30 sec

Daylight sensor set-up.

SW4	SW5	SW6	Lux
0	0	0	DISABLED
0	0	1	250
0	1	0	200
0	1	1	160
1	0	0	120
1	0	1	80
1	1	0	50
1	1	1	20

Position the DIP switches to the required setting as shown above. Note, the sensor will initially operate for 40 seconds when powered up.

6

Replace terminal cover onto sensor.

7

Rotate the retention springs and insert into the cut-out.

Page 2 of 2

Tamlite Technical
Stafford Park 12,
Telford, Shropshire,
TF3 3BJ

+44(0)1952 292441
technical@tamlite.co.uk
Document No: V1

