### INSTALLATION & OPERATING INSTRUCTIONS



**Product Name: BULKHEAD CC** 

#### General Information

- This luminaire must be installed in accordance with the latest edition of the IET Wiring Regulations and local Building Regulation by a qualified competent person.
- The mains power supply must be turned off before inspection, installation or removal of the luminaire, ensuring that the supply is locked off to prevent inadvertently switching the supply on.
- It is the installer's responsibility to ensure that the installation is suitable for the total load of the luminaire(s). The supply cable fuses/circuit breakers must be correctly rated for the electrical load and taking into account for any transient inrush currents that may occur.
- It is the installer's responsibility to ensure that the environmental operating and storage conditions are complied with and that any fire risks are considered.
- · Do not perform insulation strength or insulation resistance tests on the installation with the luminaire(s) connected, this can damage the luminaires and give erroneous readings.
- Do not loop-in supply cables at the luminaire supply terminals unless there is provision for 2-way connection at the terminals.
- The light source contained in this luminaire must only be replaced by Tamlite Lighting or an appointed service agent.
- Emergency lighting luminaires must be installed and maintained in accordance with the emergency lighting standard BS 5266-1.
- To ensure that the product warranty remains valid, the luminaire must be installed and maintained in accordance with these installation instructions and the product must not be modified in any way.




Luminaires marked with this symbol must not be covered with thermally insulating material.



This symbol on covers over light sources indicates dangerous live parts do not operate the luminaire with this cover removed.

### **Dimensions**

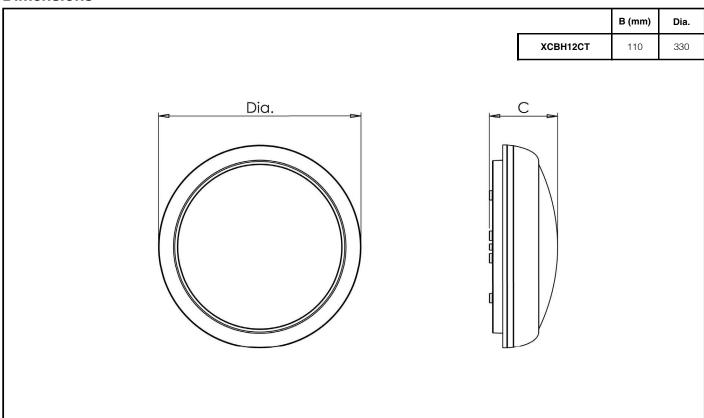

Page 1 of 3

Tamlite Technical Stafford Park 12, Telford, Shropshire,



technical@tamlite.co.uk

Document No: V1










**IP65** 

ta 5°C to 25°C

# **INSTALLATION & OPERATING INSTRUCTIONS**



**Product Name: BULKHEAD CC** 

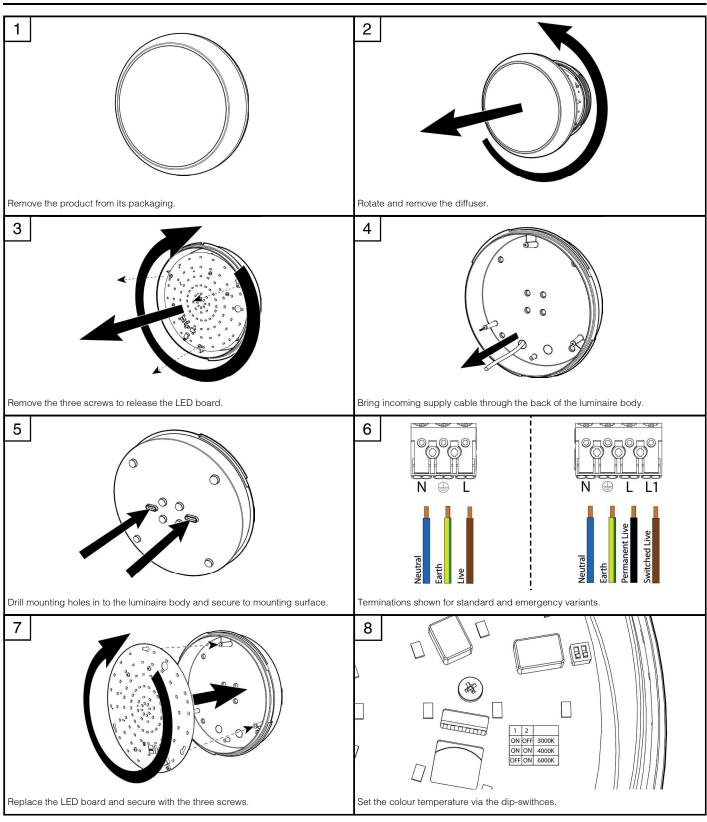

# Page 2 of 3

Tamlite Technical Stafford Park 12, Telford, Shropshire, TF3 3BJ

+44(0)1952 292441

technical@tamlite.co.uk
Document No: V1











IP65

ta 0°C to 25°C 5°C to 25°C for M3 variants

# **INSTALLATION & OPERATING INSTRUCTIONS**



 
**Product Name: BULKHEAD CC** 

9

## 1. Sensitivity

Sensitivity can be adjusted by selecting the combination on the DIP switches for different applications.


I – 100%
II - 75%
III - 50%
IV - 10%



### 2. Hold-time

Hold-time refers to the time period that the light remains 100% on if no more movement is detected.

 - 5s						
I – 90s						
II – 5min						
V – 15min						



## 3. Daylight threshold


Different daylight threshold can be preset on DIP switches. Light will always turn on upon movement if daylight sensor is disabled.

I – Disable
II – 50Lux
III = 101  my



	5	6	
-1	•	•	Disable
П	•	0	50Lux
Ш	0	•	10Lux
IV	0	0	2Lux

Set the microwave sensor via the dip-swithces.

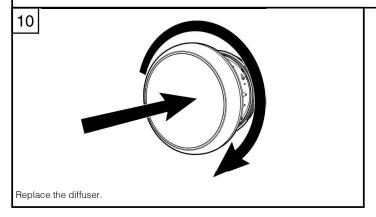

# Page 3 of 3

Tamlite Technical Stafford Park 12, Telford, Shropshire, TF3 3BJ



technical@tamlite.co.uk

Document No: V1











IP65

ta 0°C to 25°C 5°C to 25°C for M3 variants