

Product Name: **DOWNLIGHT WW**

The products listed contains a light source of energy efficiency class:




XCDL 12 / 15 / 17 / 22



XCDL 4 / 8

Disassembly Instructions:

1. Ensure power is off prior to disassembly.
2. Slowly pull down until retention clips are exposed then pinch together to remove with ease.
3. Unscrew and disconnect connector cables.
4. Undo terminations.
5. Unscrew screws on back of downlight.
6. Unscrew all visible screws and nuts to segregate all component parts.

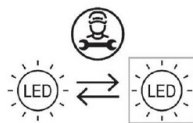

Replaceable (LED only) light source by a professional



Replaceable control gear by professional