

Product Name: **PANEL**

The products listed contains a light source of energy efficiency class:




XCRP12650 NW / CW / DL



XCRP6630 WW / NW / CW / DL

Disassembly Instructions:

1. Ensure power is off prior to disassembly.
2. Push the panel up and rotate to safely eject from ceiling.
3. Disconnect the barrel plug.
4. Undo terminations.
5. Unscrew all visible screws and nuts to segregate all component parts.

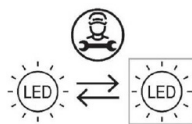

Replaceable light source by a professional



Replaceable control gear by a professional