

Product Name: **XCFRATX1**

The products listed contains a light source of energy efficiency class:




XCFRATX1

Disassembly Instructions:

1. Ensure power is off prior to disassembly.
2. Slowly pull down until retention clips are exposed then pinch together to remove with ease.
3. Undo terminations.
4. Using a screw driver remove front lens cover.
5. Unscrew all visible screws and nuts including those on the gear tray.
6. Segregate all components and products.



Non-replaceable light source

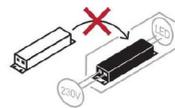

Non-replaceable control gear

Light source non replaceable due to risk of damaging luminaire
