

Product Name: BULKHEAD CC

General Information

- This luminaire must be installed in accordance with the latest edition of the IET Wiring Regulations and local Building Regulation by a qualified competent person.
- The mains power supply must be turned off before inspection, installation or removal of the luminaire, ensuring that the supply is locked off to prevent inadvertently switching the supply on.
- It is the installer's responsibility to ensure that the installation is suitable for the total load of the luminaire(s). The supply cable fuses/circuit breakers must be correctly rated for the electrical load and taking into account for any transient inrush currents that may occur.
- It is the installer's responsibility to ensure that the environmental operating and storage conditions are complied with and that any fire risks are considered.
- Do not perform insulation strength or insulation resistance tests on the installation with the luminaire(s) connected, this can damage the luminaires and give erroneous readings.
- Do not loop-in supply cables at the luminaire supply terminals unless there is provision for 2-way connection at the terminals.
- The light source contained in this luminaire must only be replaced by TamLite Lighting or an appointed service agent.
- Emergency lighting luminaires must be installed and maintained in accordance with the emergency lighting standard BS 5266-1.
- To ensure that the product warranty remains valid, the luminaire must be installed and maintained in accordance with these installation instructions and the product must not be modified in any way.

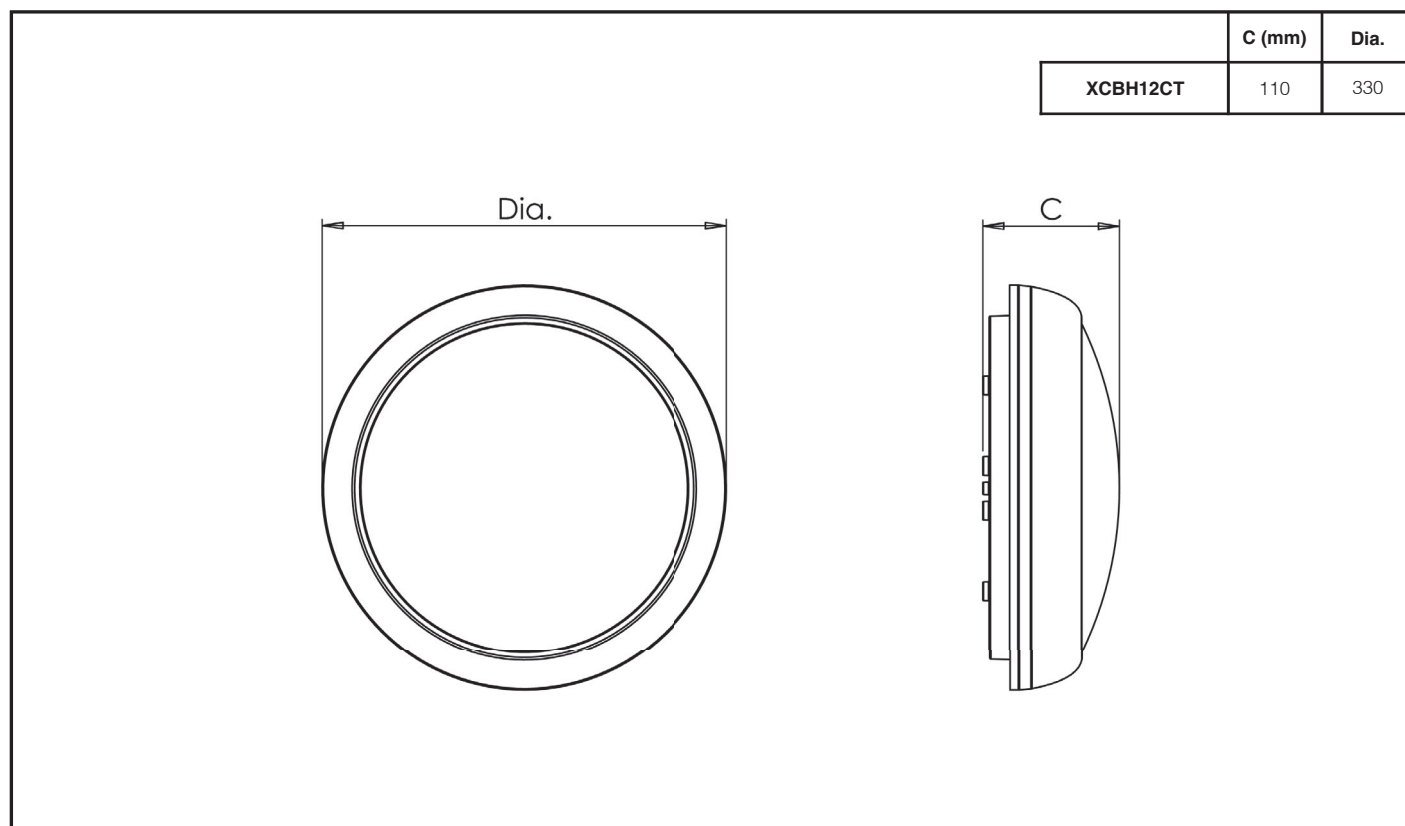


Luminaires marked with this symbol must not be covered with thermally insulating material.



This symbol on covers over light sources indicates dangerous live parts do not operate the luminaire with this cover removed.


Dimensions











Page 1 of 3

TamLite Technical
Stafford Park 12,
Telford, Shropshire,
TF3 3BJ

+44(0)1952 292441
technical@tamlite.co.uk
Document No: V2




Product Name: BULKHEAD CC
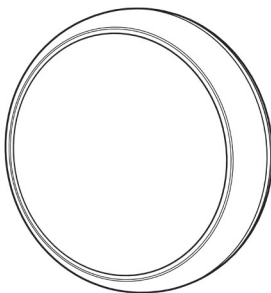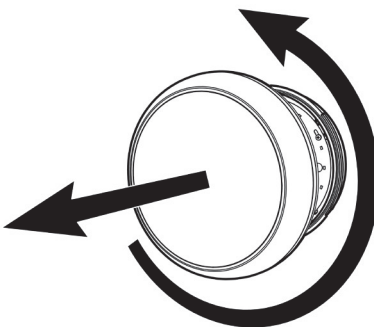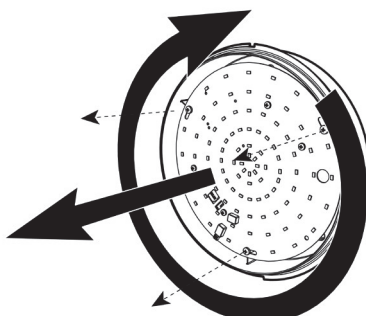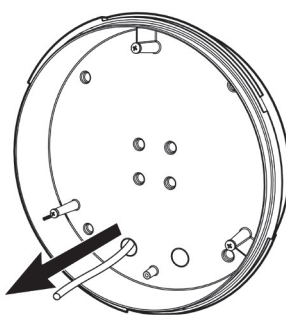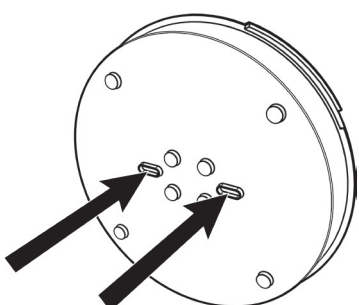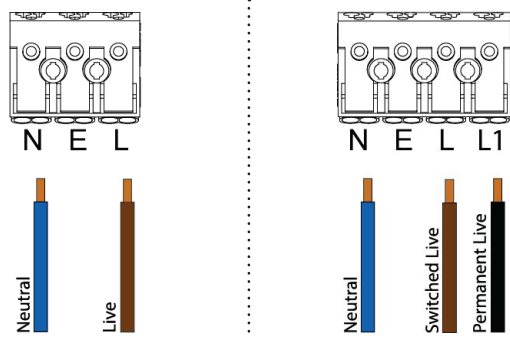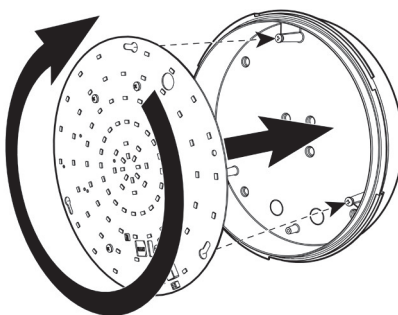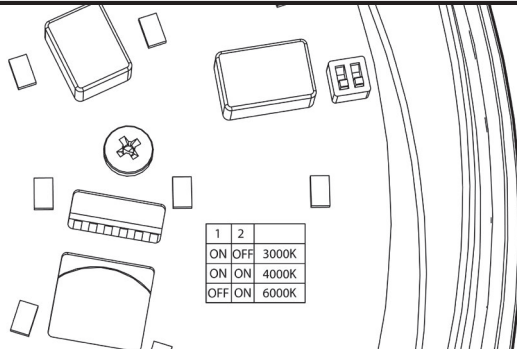
<p>1</p>  <p>Remove the product from its packaging.</p>	<p>2</p>  <p>Rotate and remove the diffuser.</p>												
<p>3</p>  <p>Remove the three screws to release the LED board.</p>	<p>4</p>  <p>Bring incoming supply cable through the back of the luminaire body.</p>												
<p>5</p>  <p>Drill mounting holes in to the luminaire body and secure to mounting surface.</p>	<p>6</p>  <p>Terminations shown for standard and emergency variants.</p>												
<p>7</p>  <p>Replace the LED board and secure with the three screws.</p>	<p>8</p>  <p>Set the colour temperature via the dip-switches.</p> <table border="1" data-bbox="1101 1702 1204 1792"> <tr> <td>1</td> <td>2</td> <td></td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>3000K</td> </tr> <tr> <td>ON</td> <td>ON</td> <td>4000K</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>6000K</td> </tr> </table>	1	2		ON	OFF	3000K	ON	ON	4000K	OFF	ON	6000K
1	2												
ON	OFF	3000K											
ON	ON	4000K											
OFF	ON	6000K											

Page 2 of 3

Tamlite Technical
Stafford Park 12,
Telford, Shropshire,
TF3 3BJ

+44(0)1952 292441
technical@tamlite.co.uk
Document No: V2



Product Name: BULKHEAD CC

9

1. Sensitivity

Sensitivity can be adjusted by selecting the combination on the DIP switches for different applications.

I – 100%
II – 75%
III – 50%
IV – 10%



	1	2	
I	●	●	100%
II	●	○	75%
III	○	●	50%
IV	○	○	10%

2. Hold-time

Hold-time refers to the time period that the light remains 100% on if no more movement is detected.

I – 5s
II – 90s
III – 5min
IV – 15min



	3	4	
I	●	●	5s
II	●	○	90s
III	○	●	5min
IV	○	○	15min

3. Daylight threshold

Different daylight threshold can be preset on DIP switches. Light will always turn on upon movement if daylight sensor is disabled.


I – Disable
II – 50Lux
III – 10Lux
IV – 2Lux



	5	6	
I	●	●	Disable
II	●	○	50Lux
III	○	●	10Lux
IV	○	○	2Lux

For sensor options set the microwave sensor via the dip-switches.

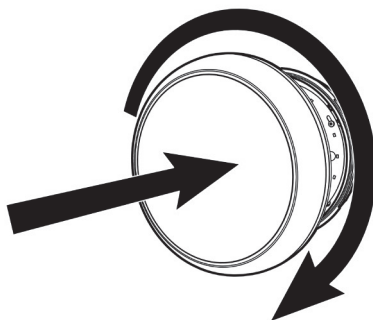10



Replace the diffuser.