

Product Name: XCITE FLOODLIGHT WITH PIR

General Information

- This luminaire must be installed in accordance with the latest edition of the IET Wiring Regulations and local Building Regulation by a qualified competent person.
- The mains power supply must be turned off before inspection, installation or removal of the luminaire, ensuring that the supply is locked off to prevent inadvertently switching the supply on.
- It is the installer's responsibility to ensure that the installation is suitable for the total load of the luminaire(s). The supply cable fuses/circuit breakers must be correctly rated for the electrical load and taking into account for any transient inrush currents that may occur.
- It is the installer's responsibility to ensure that the environmental operating and storage conditions are complied with and that any fire risks are considered.
- Do not perform insulation strength or insulation resistance tests on the installation with the luminaire(s) connected, this can damage the luminaires and give erroneous readings.
- Do not loop-in supply cables at the luminaire supply terminals unless there is provision for 2-way connection at the terminals.
- The light source contained in this luminaire must only be replaced by TamLite Lighting or an appointed service agent.
- Emergency lighting luminaires must be installed and maintained in accordance with the emergency lighting standard BS 5266-1.
- To ensure that the product warranty remains valid, the luminaire must be installed and maintained in accordance with these installation instructions and the product must not be modified in any way.

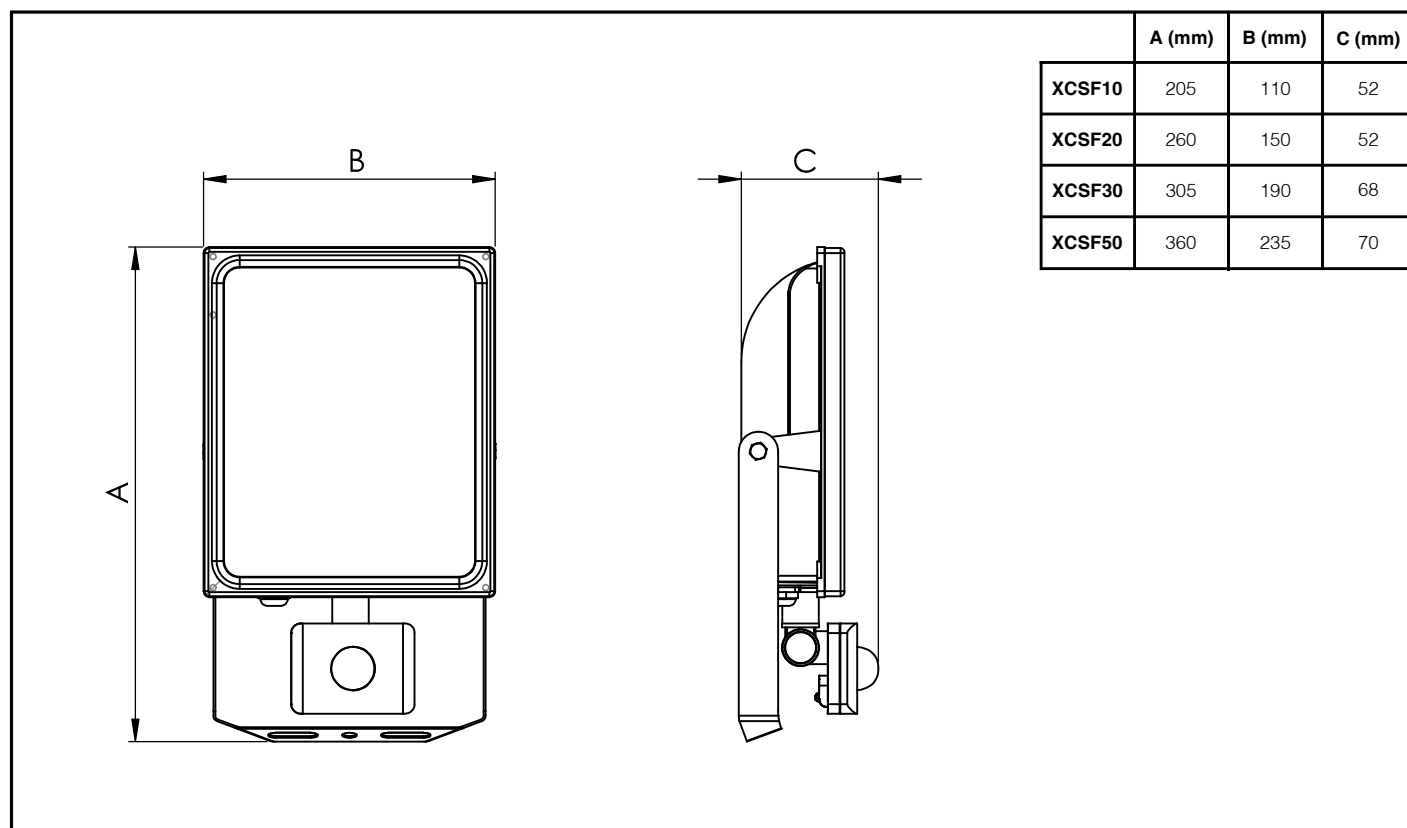


Luminaires marked with this symbol must not be covered with thermally insulating material.

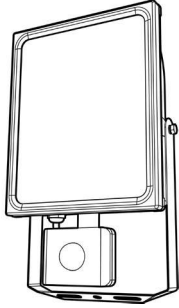
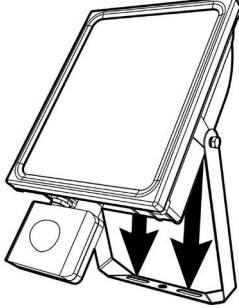
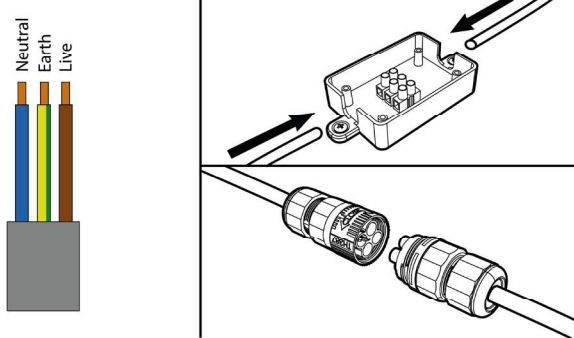
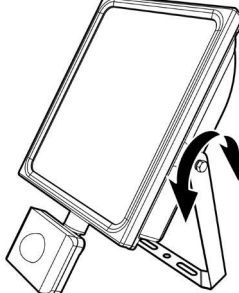
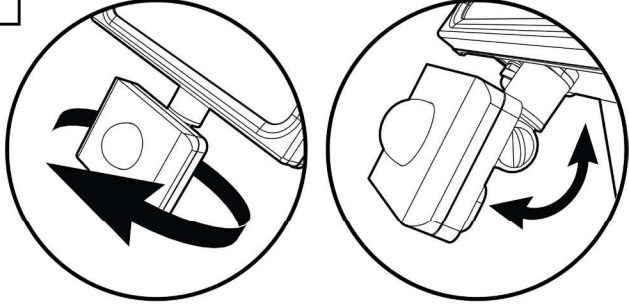
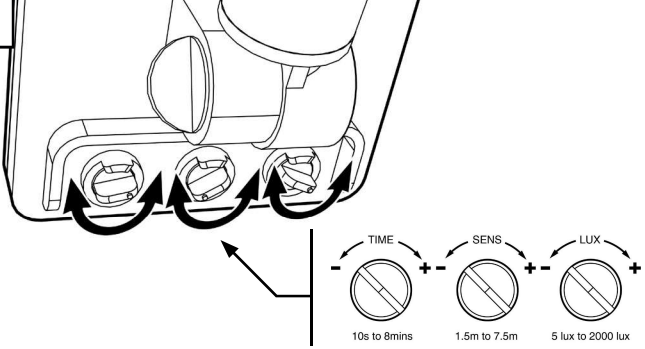


This symbol on covers over light sources indicates dangerous live parts do not operate the luminaire with this cover removed.

Dimensions



Product Name: XCITE FLOODLIGHT WITH PIR

<p>1</p>  <p>Remove the Product from its packaging.</p>	<p>2</p>  <p>Secure the bracket to the mounting surface with appropriate hardware.</p>
<p>3</p>  <p>Terminate mains cable to the prewired lead using a suitable IP65 rated connector.</p>	<p>4</p>  <p>Adjust floodlight angle as required and tighten fixing screws.</p>
<p>5</p>  <p>Rotate and tilt the PIR to desired position.</p>	<p>6</p>  <p>Rotate the dials to the desired settings.</p> <p>TIME: 10s to 8mins SENS: 1.5m to 7.5m LUX: 5 lux to 2000 lux</p>
<p>7</p> <p>Load - Max 100W</p> <p>Lux Control - The desired lux level at which the luminaire will switch on/off can be set by rotating the LUX dial.</p> <p>Time Control - The length of time that the luminaire stays on from 10 seconds up to 8 minutes can be adjusted by rotating the TIME dial from (-) to (+).</p> <p>PIR Override - The PIR sensor can be overridden to keep the floodlight on permanently. With the floodlight switched on, switch it off and back on again within 2 seconds to fix the floodlight in the on position. To return the floodlight to standard PIR operation, switch it off for at least 10 seconds then switch it back on.</p> <p>Sensitivity - Rotate the SENS dial to increase or decrease the distance of which movement will be picked up, from 1.5 to 7.5 metres.</p> <p>Note: Equipment with infra-red emitters (eg. Night-vision CCTV) may interfere with PIR operation, we suggest a minimum separation distance of 1m.</p>	

Page 2 of 2

Tamlite Technical
Stafford Park 12,
Telford, Shropshire,
TF3 3BJ

+44(0)1952 292441
technical@tamlite.co.uk
Document No: V3

